



**THE BRACKET**

FACE FIX Mounting

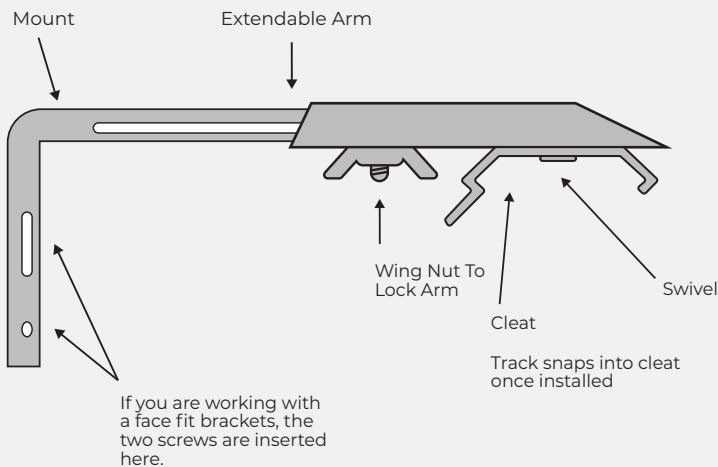

TOP FIX Mounting

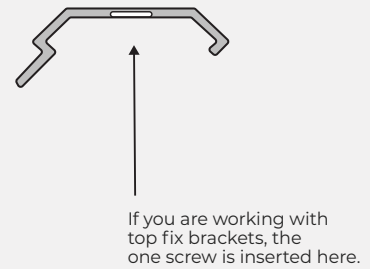


**STEP 1: POSITIONING THE BRACKETS**

**Option 1 - Face Fix Mounting**


**A.** Two brackets should be arranged at either side of the rail, 100mm away from the end.

**B.** Spare brackets should be dispersed uniformly along the width of the rail.

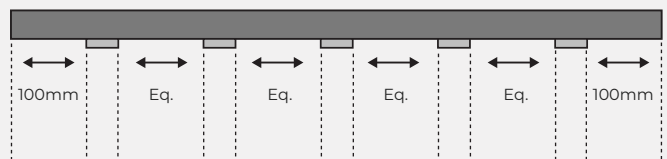

**Option 2 – Top Fix Mounting**

**A.** If you are working with top-fix brackets, the front edge of the bracket must be positioned at least 75mm away from the facing exterior. By following this guide it will ensure that the louvers pivot freely without touching the wall or the window surrounds.

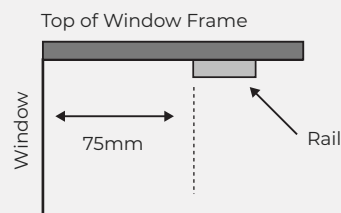


## STEP 2: FITTING THE BLIND

### Option 1 - Face Fix Mounting


**A.** To fix the bracket to the wall use two screws on the facing exterior.



**B.** Position the front rim of the rail onto the front lip of the bracket. Lift the back of the rail to meet the bracket and press securely upwards so that it clicks into place.

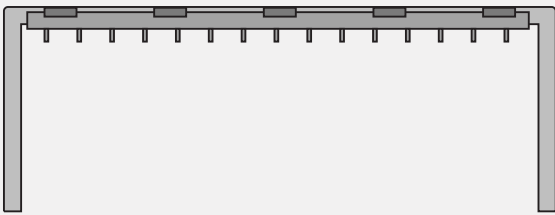


**C.** Clip in louvers.

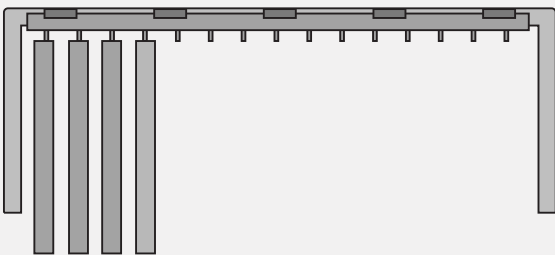


### Option 2 - Top Fix Mounting


**A.** To fix the bracket to the wall use a single screw to attach to the above exterior.

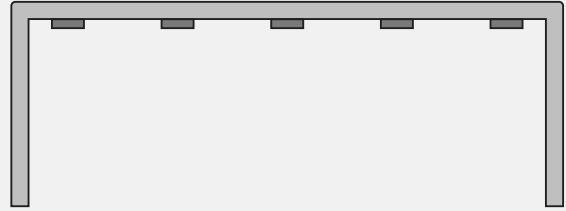

**B.** Position the front rim of the rail onto the front lip of the bracket. Lift the back of the rail to meet the bracket and press securely upwards so that it clicks into place.

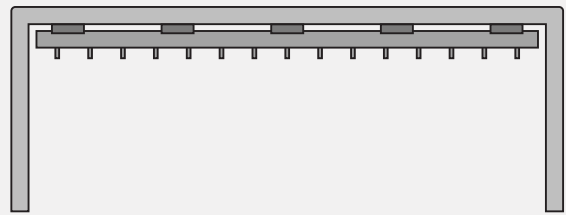

**C.** Clip in louvers.

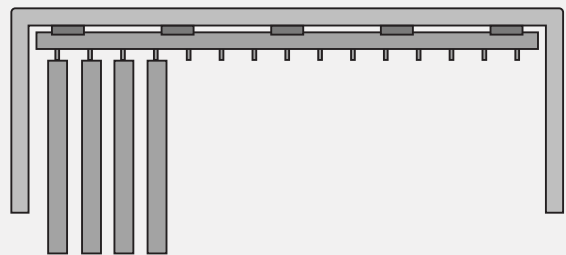

### TOP TIP!

Before arranging the louvers onto the rail, use the wand to rotate the hooks so that they all face to the side. This will allow you to hook and position the louvers with ease and also ensures that the louvers will not tangle.

If you have any questions about your installation please contact us:

(02) 4954 7190 | [sales@lakeviewblinds.com.au](mailto:sales@lakeviewblinds.com.au)